


AESCULAP® DS APPENDECTOMY-CLIP

REMOVAL AND STERILE PROVISION (LAPAROSCOPIC CLIP APPLIERS)

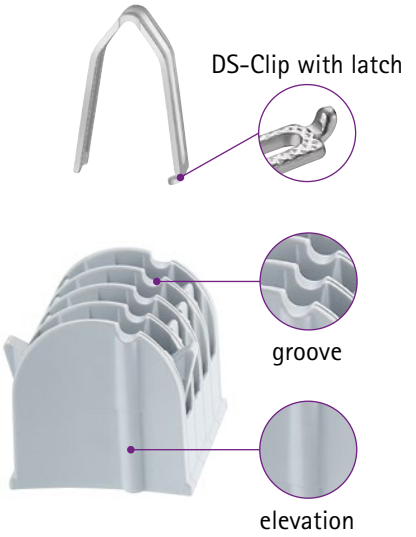

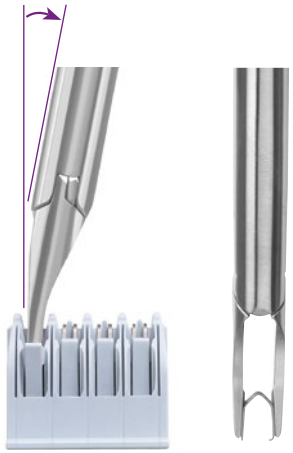

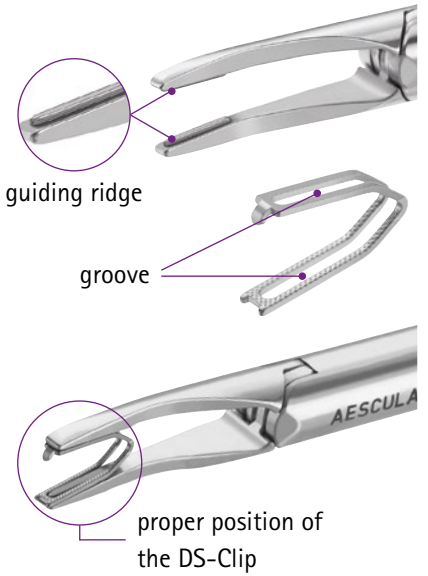



1

The groove in the clip cartridge as well as the elevation in the recessed grip mark the position of the latch.

2

Position the clip cartridge on a sterile surface by removing the adhesive tape.

3

Insert jaws of the clip applier vertically and with slight pressure up to the stop in the clip cartridge (consider jaw part angulation).
Subsequently, remove the clip applier with the DS-Clip from the cartridge.
Easy identification of empty slots due to protruding wings.

4

Ensure correct fit of the DS-Clip in the applier:

- guding ridges of the jaws must be in the groove of the DS-Clip
- The clip must be positioned all the way into the applier

5

In order to close the DS-Clip correctly, press the handles together up to the stop. Make sure, that the DS-Clip is applied under visual control. Ensure that the tissue to be ligated is fully inside the DS-Clip. Check the fit and operability of the clip. A different proceeding is at the discretion of the user.

D-ST18012 0419/PDF/1

AESCULAP® – a B. Braun brand

Aesculap AG | Am Aesculap-Platz | 78532 Tuttlingen | Germany
Phone +49 7461 95-0 | Fax +49 7461 95-2600 | www.aesculap.com